

FURUKAWA HD300 Drifter Parts for HCR300 Crawler Drill

FURUKAWA HD300

No	Crawler Drill	Drifter	Part Number	Part Name	Q'ty	Unit Price	Remarks
	HCR 300	HD300		Cylinder			
1	HCR 300	HD300	007320-70104	Diaphragm			
2	HCR 300	HD300	007320-20004	Plain Bearing (A)			
3	HCR 300	HD300	007320-20006	Plain Bearing (B)			
4	HCR 300	HD300	007620-22002	Chuck Driver Bushing			
5	HCR 300	HD300	007620-22003	Chuck			
6	HCR 300	HD300	007620-22001	Chuck Driver			
7	HCR 300	HD300	007320-20016	Front Cap			
8	HCR 300	HD300	007620-34001	Blow Tube			
9	HCR 300	HD300	007620-13001	Valve			
10	HCR 300	HD300	007320-22004	Drive Gear			
11	HCR 300	HD300	007620-25003	Shank Rod			
12	HCR 300	HD300	007620-25007	Shank Rod			
13	HCR 300	HD300	007320-60005	Orbit Motor			
14	HCR 300	HD300	007620-11001	Piston			007620-11002, 6kg
15	HCR 300	HD300	007620-13002	Valve Plug			
16	HCR 300	HD300	007320-20010	Front Cover			
17	HCR 300	HD300	007320-20009	Front Head			
18	HCR 300	HD300	007620-30002	Back Head			
19	HCR 300	HD300	007320-36003	Through Bolt Nut			
20	HCR 300	HD300	007320-36002	Through Bolt (B)			
21	HCR 300	HD300	007320-10002	Adjuster			
22	HCR 300	HD300	007620-34002	Blow Connection Cap			
23	HCR 300	HD300	007320-34002	Blow Tube Rubber			
24	HCR 300	HD300	007320-36001	Through Bolt (A)			
25	HCR 300	HD300	007210-10007	20 Washer			
26	HCR 300	HD300	007210-10006	Socket Bolt			
27	HCR 300	HD300	007010-60012	Nut			
28	HCR 300	HD300	007320-60006	Hose Adapter			
29	HCR 300	HD300	007120-60010	Socket Bolt			
30	HCR 300	HD300	007320-60003	Washer			
31	HCR 300	HD300	007120-10031	Bush			
32	HCR 300	HD300	007320-20013	Thrust Washer			
33	HCR 300	HD300	007320-10005	Nut			
34	HCR 300	HD300	001200-36012	Nut			
35	HCR 300	HD300	007320-25006	Cup Seal			
36	HCR 300	HD300	007210-30002	Knock Pin			
37	HCR 300	HD300	280100-06210	Bearing			
38	HCR 300	HD300	007320-70101	Accumulator Cover			
39	HCR 300	HD300	007010-70029	Cap			
40	HCR 300	HD300	007320-70102	Accumulator Body			
41	HCR 300	HD300	007320-30006	3/4 Street Union Adapter			
42	HCR 300	HD300	102032-20075	Socket Bolt			
43	HCR 300	HD300	120132-20000	Nut			
44	HCR 300	HD300	P-2093	9 Hose Spud			

No	Crawler Drill	Drifter	Part Number	Part Name	Q'ty	Unit Price	Remarks
45	HCR 300	HD300	007620-20002	Thrust Bush			
46	HCR 300	HD300	007620-20001	Front Bush			
47	HCR 300	HD300	007320-20015	Thrust Washer			
48	HCR 300	HD300	007120-70134	Valve			
49	HCR 300	HD300	024101-01001	Track Bearing			
50	HCR 300	HD300	024101-04004	Front Idler			
51	HCR 300	HD300	24101-04005	Bush			
52	HCR 300	HD300	924101-04008	Floating Seal Set			
53	HCR 300	HD300	024101-04006	Idler Shaft			
54	HCR 300	HD300	924101-05009	Track Roller			
55	HCR 300	HD300	920001-07001	Carrier Roller			
56	HCR 300	HD300	924101-02002	Drive Motor			
57	HCR 300	HD300	924101-02003	Drive Sprocket			
58	HCR 300	HD300	924103-02001	Gear Box			
59	HCR 300	HD300	924109-01001	Compressor			
60	HCR 300	HD300	923008-08004	Plunger Pump			
61	HCR 300	HD300	923008-08007	Plunger Pump			
62	HCR 300	HD300	922003-09006	Gear Pump			
63	HCR 300	HD300	081300-01048	Front Sprocket (A)			
64	HCR 300	HD300	081300-03016	Wear Plate			
65	HCR 300	HD300	081300-02020	Guide Plate			
66	HCR 300	HD300	822200-02009	Roller			
67	HCR 300	HD300	970201-02001	Break Valve			
68	HCR 300	HD300	970201-01001	Axial Piston Motor			
69	HCR 300	HD300	982002-02003	Torgue Motor			
70	HCR 300	HD300	082005-03002	Rollar			
71	HCR 300	HD300		Drifter Seal kit-HD300			

e-trade
ENGINEERING